



7 Remote Control 遥控器

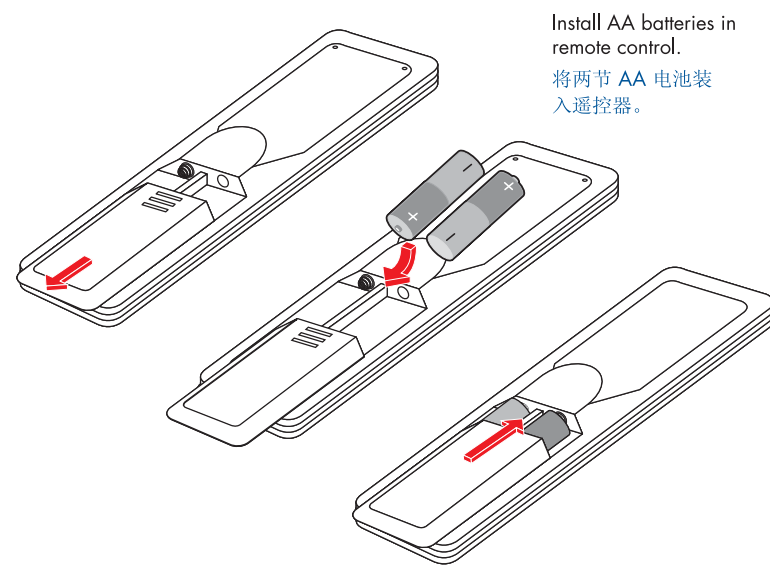

Install AA batteries in remote control.
将两节 AA 电池装入遥控器。


8 FM antenna 调频天线

Select models only
FM signal to computer
（仅适用于部分型号）
将调频信号接入电脑

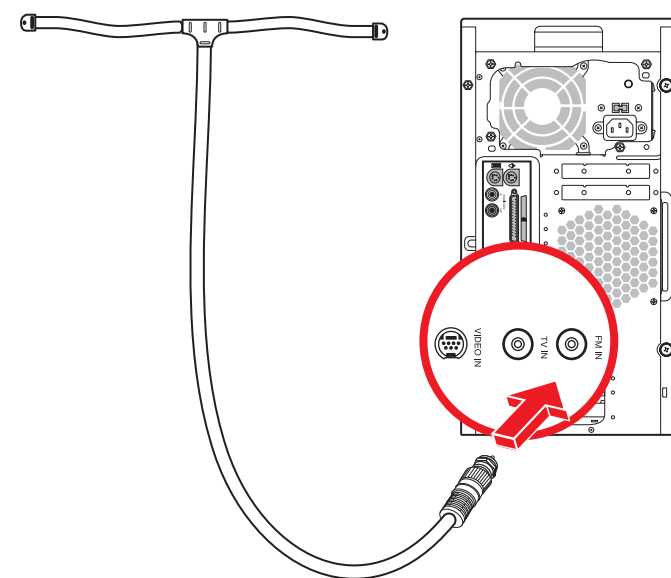


9 Power Connection 连接电源

Computer to electrical outlet
Grounded connection or connection to surge protector is recommended
将电脑连接到电源插座
建议接地或连接电涌保护器。

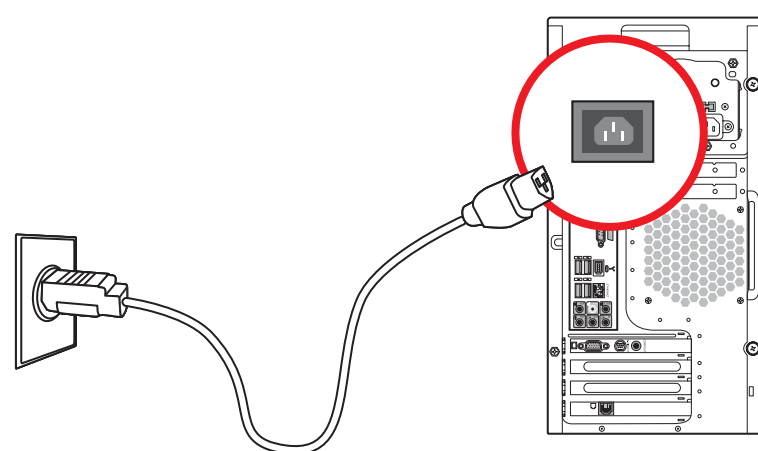


10 Modem / LAN 调制解调器 / LAN

Connect modem cable to computer.
Select models only.
将调制解调器电缆连接到电脑。
仅适用于部分型号。



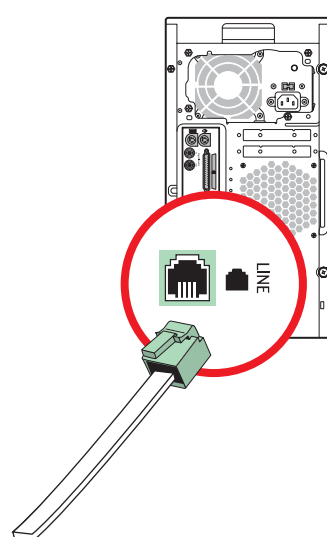


Connect your Ethernet cable to computer.
Cable not included.
将 Ethernet 电缆连接到电脑。
未提供电缆。

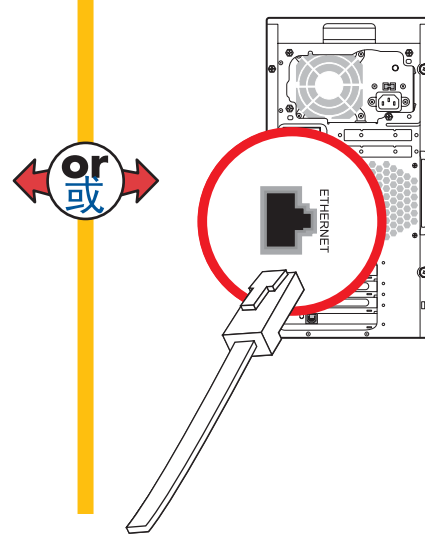


Your PC may look different from the ones shown here. Component, connector location, type, and number vary by model.

您电脑的外观可能与这里显示的有所不同。电脑中的组件、接口的位置、类型和数目会因型号而异。

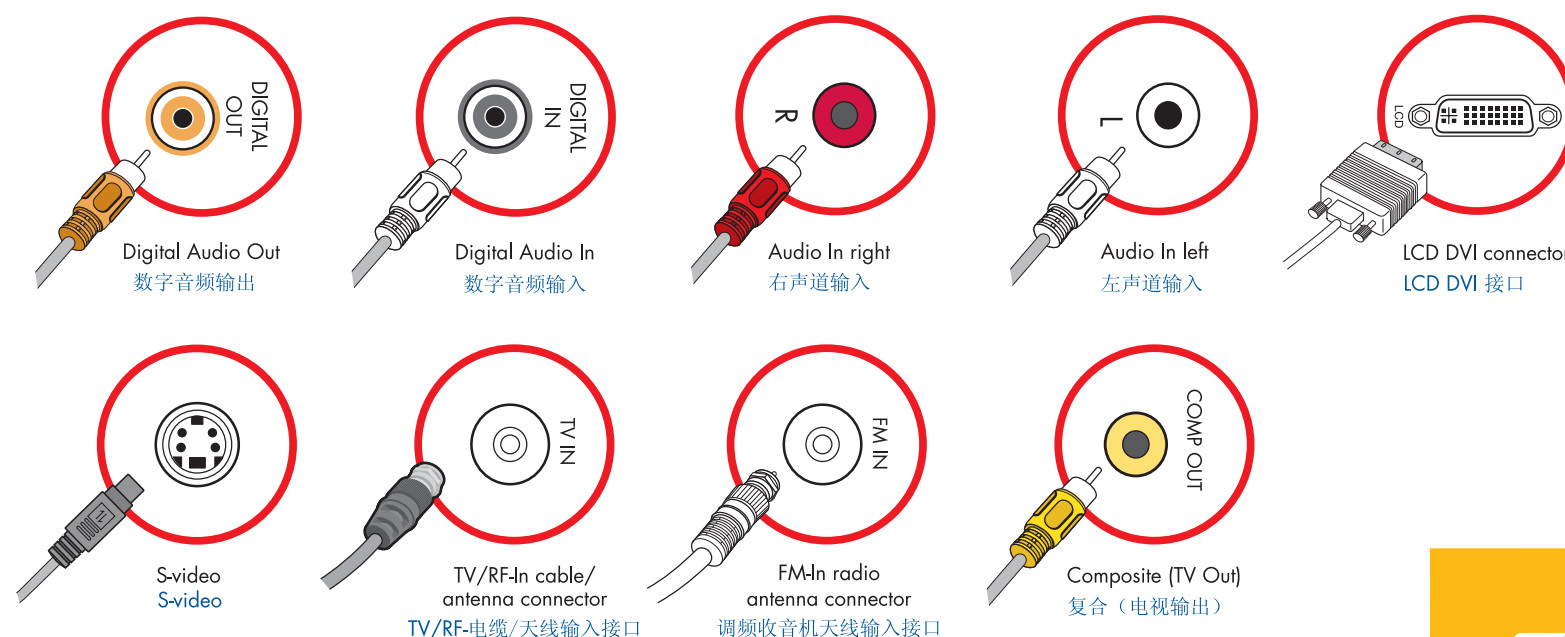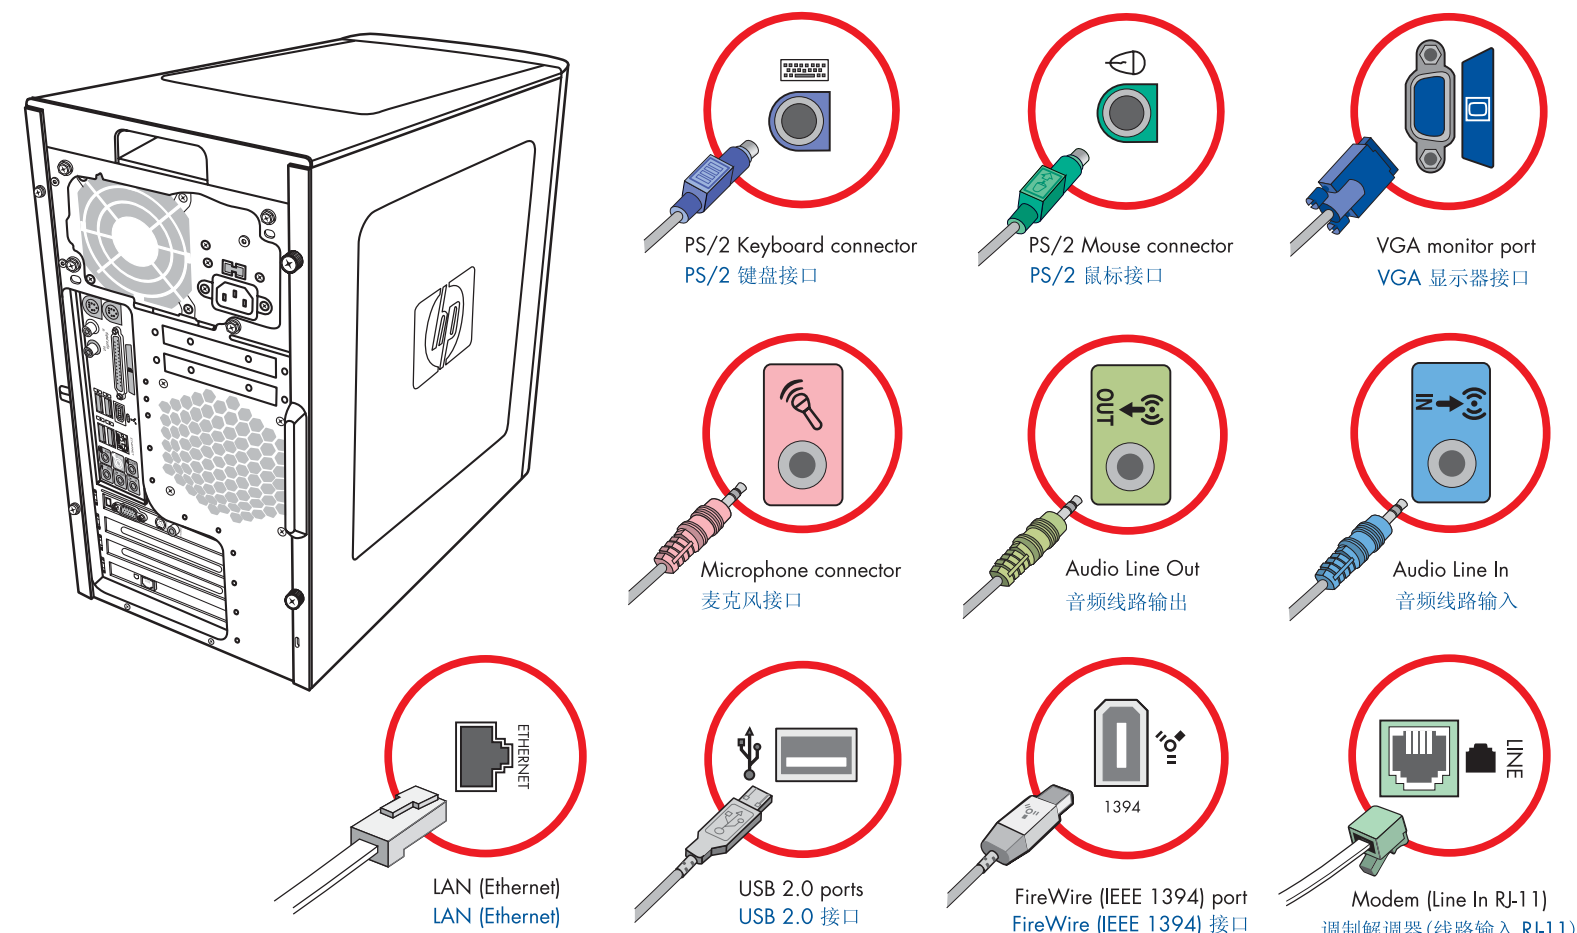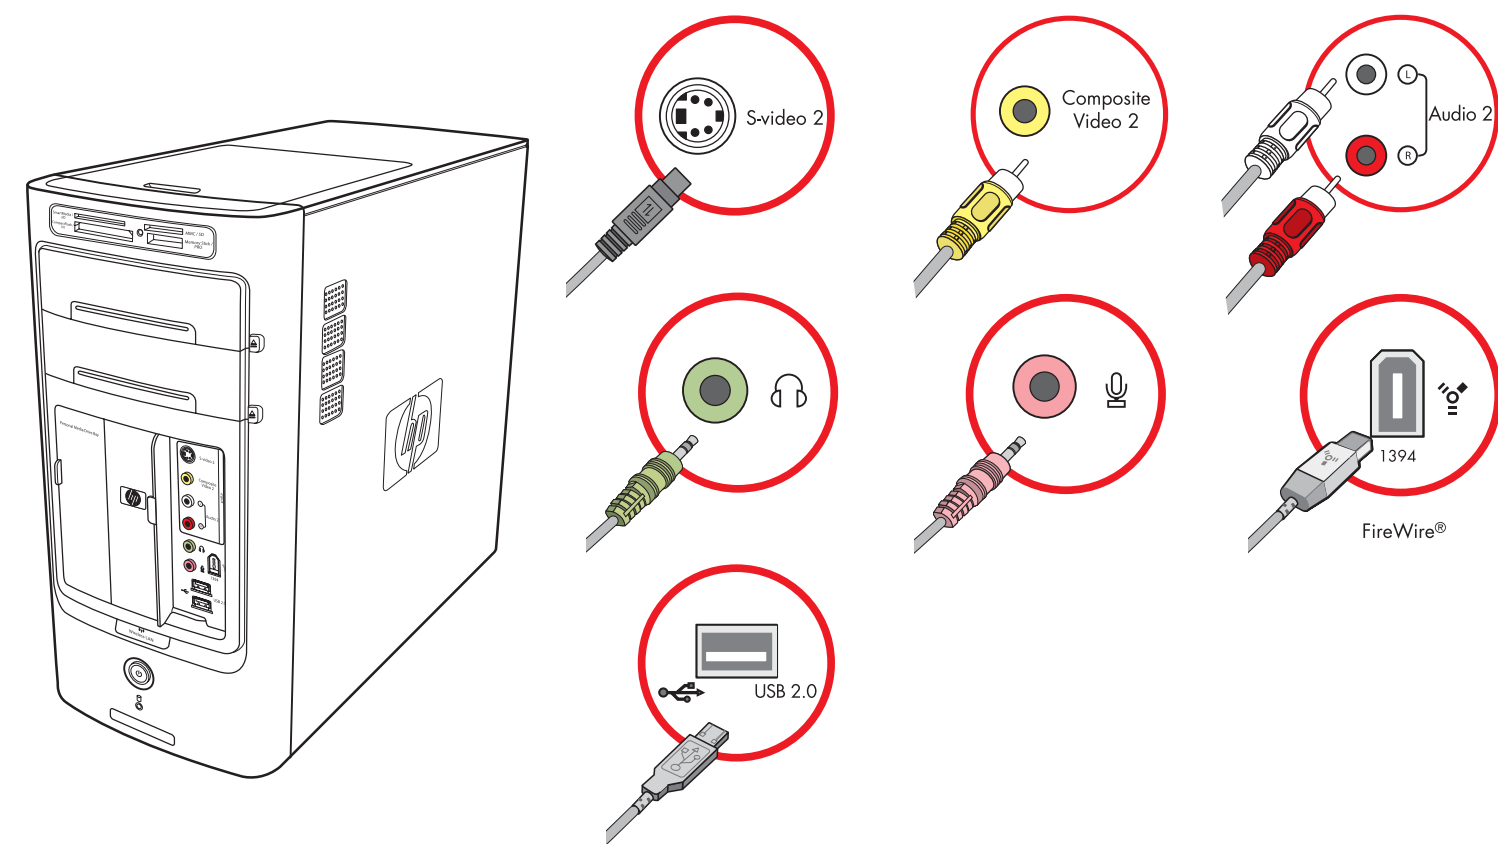

11 Power On 开机

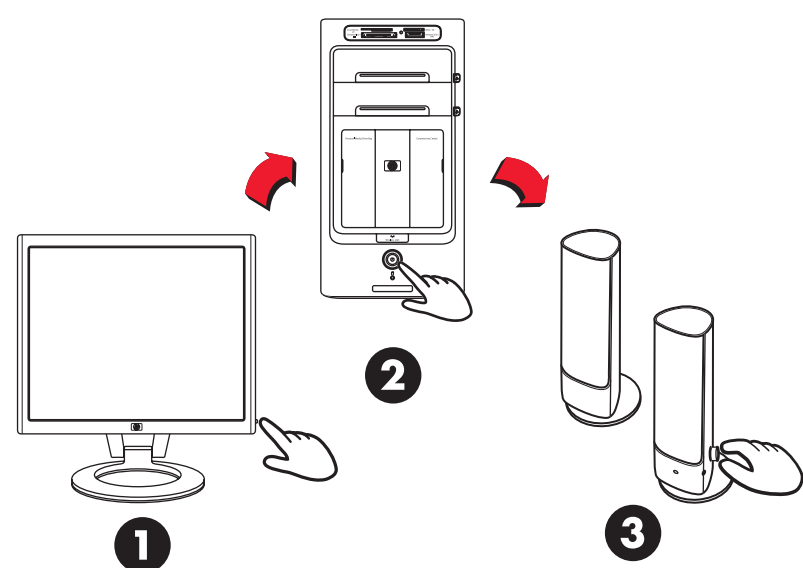

Turn on monitor, computer, and sound system.
打开显示器、电脑，然后打开声音系统。

China only — 仅适用于中国

激活 Windows XP

您必须在试用期内激活 Windows XP，否则，试用期结束后将无法继续使用 Windows XP。您可以通过 Internet 或电话激活 Windows XP。激活 Windows XP 的方法是：

- 1 单击“开始”，选择“所有程序”，然后单击“激活 Windows”。
- 2 按屏幕上的说明进行操作。您必须输入电脑的 Windows XP 标签上的 25 位产品密钥号。

注意：执行“系统复原”或“系统还原”之后，必须重新激活 Windows XP。